
RS-232 Protocol Specification (MeetingPad- 828) 05.02.2018

RS-232 Control

You can control this monitor by using a personal computer with RS-232 terminal. RS-232 data is transmitted between devises through a DUB9 Cable.

RS-232 Data Flow (using by 9P RS-232 Cable)

You can control this monitor by using a personal computer with RS-232 terminal. RS-232 data is transmitted between devises through a DUB9 Cable.

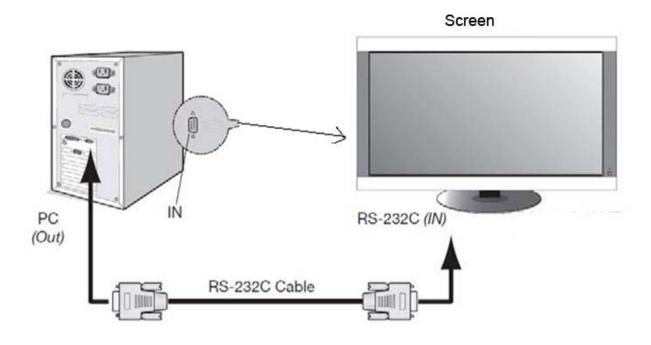

COM Port Settings

| Protocol | RS-232 |
|--------------------|-----------|
| Baud Rate | 115200bps |
| Data Bits | 8 Bit |
| Parity Bit | None |
| Stop Bit | 1 Bit |
| Flow Control | None |
| Communication Code | HEX |

Control OSD Command Format

The code format needs to be HEX.

| Commands | SOH | Message | Message | ID | Sum | End |
|------------------|-----|---------|---------|----|-----|-----|
| Home | 99 | 23 | 00 | 01 | FF | AA |
| Power Off | 99 | 23 | 01 | 01 | FE | AA |
| Power On | 99 | 23 | 80 | 01 | 7F | AA |
| Mute | 99 | 23 | 02 | 01 | FD | AA |
| Sound Mode | 99 | 23 | 03 | 01 | FC | AA |
| Picture Mode | 99 | 23 | 04 | 01 | FB | AA |
| CVBS | 99 | 23 | 08 | 01 | F7 | AA |
| YPbPr | 99 | 23 | 0A | 01 | F5 | AA |
| VGA | 99 | 23 | OB | 01 | F4 | AA |
| HDMI 1 | 99 | 23 | OE | 01 | F1 | AA |
| HDMI 2 | 99 | 23 | OF | 01 | FO | AA |
| HDMI Front | 99 | 23 | 10 | 01 | EF | AA |
| OPS | 99 | 23 | 11 | 01 | EE | AA |
| DP | 99 | 23 | 09 | 01 | F6 | AA |
| Menu | 99 | 23 | 12 | 01 | ED | AA |
| Input | 99 | 23 | 13 | 01 | EC | AA |
| Exit | 99 | 23 | 14 | 01 | EB | AA |
| Eco | 99 | 23 | 15 | 01 | EA | AA |
| Volume Up | 99 | 23 | 17 | 01 | E8 | AA |
| Volume Down | 99 | 23 | 18 | 01 | E7 | AA |
| Display Settings | 99 | 23 | 1C | 01 | E3 | AA |
| Display Ratio | 99 | 23 | 1E | 01 | E1 | AA |
| Sleep Timer | 99 | 23 | 1D | 01 | E2 | AA |
| Up | 99 | 23 | 22 | 01 | DD | AA |
| Down | 99 | 23 | 23 | 01 | DC | AA |
| Left | 99 | 23 | 24 | 01 | DB | AA |
| Right | 99 | 23 | 25 | 01 | DA | AA |
| Confirm/Play | 99 | 23 | 27 | 01 | D8 | AA |
| Status Check | 99 | 23 | 28 | 01 | D7 | AA |

Status Check

Command: 99 23 28 01 D7 AA

Respond: 0x99, 0x01, 0x01, Surce, Volume, Source, Sound Mode, 01, AA

RS-232 Protocol Specification

Source:

| HDMI 1 | 0x0E |
|------------|--------------|
| HDMI 2 | 0x0F |
| HDMI Front | 0x10 |
| CVBS | 0x08 |
| YPbPr | 0x0A |
| VGA | 0x0B |
| OPS | 0x11 |
| DP | 0x09 |
| VGA OPS | 0x0B 0x11 |

<mark>Sound Mode</mark>:

| Standard | 0x01 | | |
|----------|------|--|--|
| Music | 0x02 | | |
| Movie | 0x03 | | |
| Sports | 0x04 | | |
| User | 0x05 | | |

Why Choose Our Commercial Display Solutions?

