

USER MANUAL

SExxA Series

Model: Shelf-Edge Touch Display

Thank you for purchasing this product

To receive more complete service, please contact support: LCDsupport@live.com

Warning! Important Safety Instructions



Please take a moment to carefully read and understand the following safety instructions before using your digital poster:

Ventilation:

The slots and openings on the back or bottom of the screen is designed to provide necessary ventilation. To ensure the reliable operation of the device and prevent overheating, it is crucial that these slots and openings are never blocked or covered.

Avoid placing the screen in confined spaces like bookcases or built-in cabinets, unless proper ventilation is available.

Keep the screen away from radiators and heat registers

Water and Moisture:

Do not place vessels (such as vases) containing water on the screen, as this can result in fire or electric shock.

Avoid exposing the screen to rain or placing it near water sources like bathtubs, washbowls, kitchen sinks, laundry tubs, wet basements, or swimming pools. In case of accidental exposure to water, immediately unplug the device and contact an authorized dealer.

Electrical Safety:

Avoid overloading wall outlets, extension cords, or adapters beyond their capacity, as this can lead to fire or electric shock.

Ensure that power-supply cords are positioned in a way that prevents them from being walked on or pinched. Pay attention to cords at the plug end, wall outlets, and where they exit the device.

During lightning storms or when leaving the screen unused for extended periods, unplug it from the wall outlet and disconnect the antenna or cable system to prevent damage from lightning or power line surges.

Never touch the inside of the screen, as it may result in electric shock. Only qualified technicians should open the device.

Always firmly plug in the power cord and pull the plug, not the cord itself, when disconnecting from the wall outlet. Avoid touching the power cord with wet hands.

If the screen does not operate normally, emits unusual sounds or smells, immediately unplug it and contact an authorized dealer or service center.

Installation Considerations:

For information on installing the screen in environments with heavy dust, extreme temperatures, high humidity, or chemical substances, please contact customer service. Failure to do so may cause serious damage to the screen.

Use only properly grounded plugs and wall outlets to ensure safety and prevent electric shock or equipment damage (Class I Equipment only).

When turning off the screen completely, disconnect it from the wall outlet. Ensure easy access to the wall outlet and power plug for quick unplugging if needed.

Avoid dropping or striking the product. In case of damage, disconnect the power cord and contact customer service.

Cleaning and Maintenance:

Before cleaning, unplug the power cord from the wall outlet. Use a soft, dry cloth to wipe the product. Do not use chemicals like wax, benzene, alcohol, thinners, insecticides, air fresheners, lubricants, or detergents, as they can damage the panel's appearance or erase printing on the product.

Prevent exposure of the screen to dripping or splashing liquids.

Keep the display away from heat sources and place it in a stable, well-ventilated location.

Handle the product with care, as it contains glass.

The holes or openings on the display are designed for ventilation. Do not cover or block them with any objects.

Remove any protective covering from the screen before using the display.

Power supply must be shut off before cleaning. Use a soft, lint-free cloth for screen wiping. If needed, you may use a glass cleaner, but avoid spraying it directly onto the display surface. Refer to Section 7.10 for more details.

Do not attempt to repair the product yourself, as improper disassembly may void the warranty and pose potential dangers.

If you encounter a problem that cannot be resolved using the provided troubleshooting guidelines, please contact your supplier.

Attention:

For displays intended for installation in windows, it is crucial to mount the panel surface a minimum of 100mm away from the inside of the window. However, we strongly recommend maintaining a distance of 200mm to ensure adequate air circulation between the display and the window. Failure to comply with these guidelines may result in failure, which will be considered user damage.

Table of Contents

Table of Contents	4
1. Introduction	6
1.1 Box Content	6
2. Digital Signage Player Application.....	7
2.1 Home Screen.....	7
2.2 System Menu Operation	8
2.3 System Settings	8
2.4 Display Language.....	9
2.5 Screen Mode.....	9
2.6 Screen Resolution	10
2.7 On Screen Clock	10
2.8 Play Log	11
2.9 USB	11
2.10 Sync Settings.....	12
2.11 Restore to Factory Settings.....	13
2.12 Auto Start.....	13
3. System Control	14
3.1 Work Mode	14
3.2 Content Storage	15
3.3 Machine Name	15
3.4 Network Setting	16
3.5 Server Configuration.....	16
3.6 Proxy Server Setup.....	17
3.7 IP Mode	17
3.8 Wi-Fi Setting	18
3.9 Local ID.....	18
3.10 MAC Address.....	18
3.11 Date & Time.....	19
3.12 Power On/Off.....	21
3.13 Timer Strategy	22
3.14 Volume Timer	22
3.15 Port Timer	23
3.16 File Management	25
3.17 Exit	25
4. Supported Media Files	26
5. Copying Files from a USB Drive	27
6. F.A.Qs and Troubleshooting Guide.....	29
6.1 How should I maintain and clean my screen?	29

7.	Specifications and Other Information	30
7.1	Product Overview.....	Error! Bookmark not defined.
7.2	Decreasing power consumption.....	30
7.3	Disposal.....	30
7.4	Warnings.....	30

1. Introduction

We would like to extend our congratulations on your recent purchase of our product. Before using it for the first time, we kindly request you to read the manual thoroughly and follow all provided instructions.

To ensure the proper functioning and longevity of the product, please take note of the following guidelines:

Avoid exposing the product to liquids in the form of dripping or splashing. It is essential to keep the product away from any objects that contain liquids, such as vases.

Attention:

Please refrain from making unnecessary changes to the default settings.

During both installation and use, it is crucial to keep the product away from water sources.



1.1 Box Content

1 x Shelf Edge Touch Display

1 x Power Cable

1 x QR Code for User Manual

 


Figure 1 Inputs Overview

 
2. Digital Signage Player Application

2.1 Home Screen

Once your screen has powered up and begins to play content, press the "STOP" button on the touch navigational menu to go back to the Home Screen (pictured below).



1. Double tap on the top-left corner then double tap on the bottom-left corner to bring up the control panel.

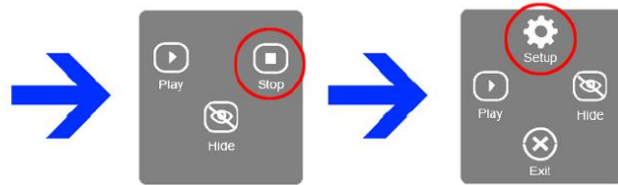

2. On the first control panel touch "Stop" to return to the blue Home screen

3. On the second control panel touch "Setup" to access the Main Menu



Figure 2 Home Screen

 
2.2 System Menu Operation

From the Home Screen, you can bring up the Main Menu by pressing the “SETUP” button on the navigational menu. The Main Menu includes following sub-menus: System Settings, System Control, Network Settings, Date & Time, Power On/Off, Timer Strategy, File Management and Exit.




2.3 System Settings

The sub-menus within this section are: Display Language, Screen Mode, Screen Resolution, On Screen Clock, USB, Scrolling Text, Sync Settings, Restore to Factory Settings and Auto Start.

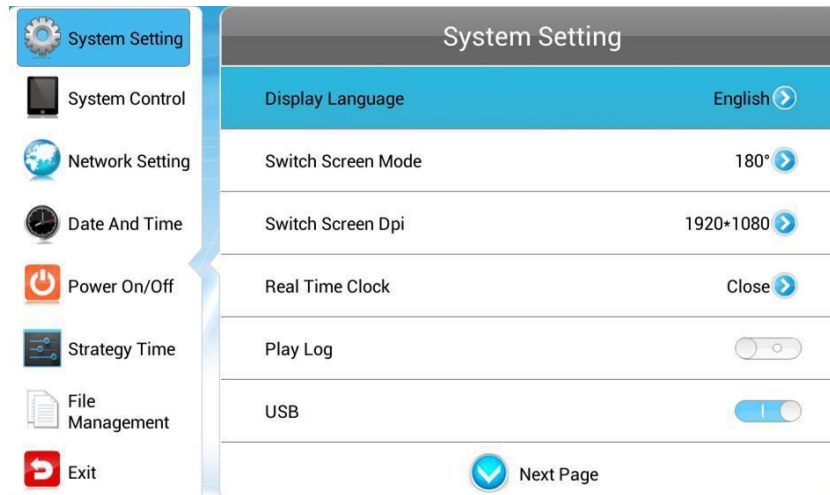

2.4 Display Language

 
The On Screen Display (OSD) supports multiple languages, with the default being English.

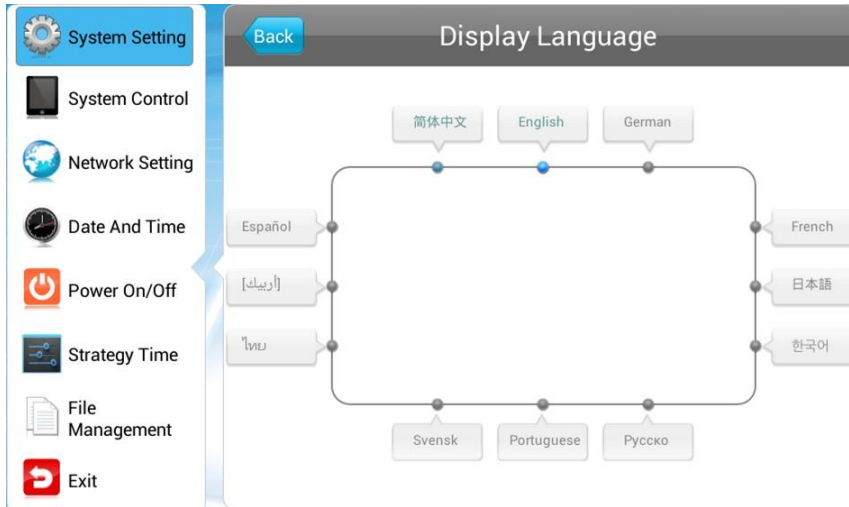

2.5 Screen Mode

Here you can set the screens orientation so that the OSD and content display correctly. There are 4 options, as pictured below:

 - 0° - Displays in landscape with the locker door on the right hand side.
- 90° (default portrait) - Displays in portrait with the locker door on the bottom.
- 180° (default landscape) - Displays in landscape with the locker door on the left hand side.
- 270° - Displays in portrait with the locker door on the top.

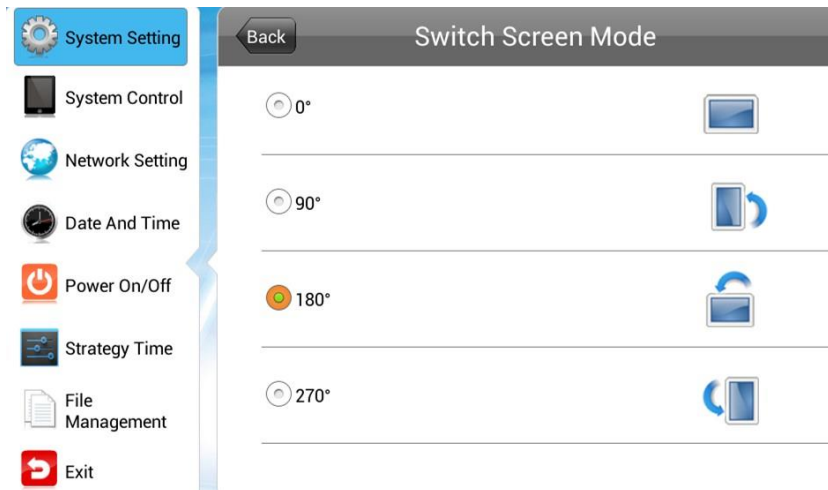


2.6 Screen Resolution

This menu allows you to set the screen resolution.

2.7 On Screen Clock


This option allows you to display a clock while content is playing. There are 5 options, as pictured below:

 - Close: The screen doesn't display time.
- Top Left: The time will be displayed on top left of the screen.
- Top Right: The time will be displayed on top right of the screen.
- Bottom Left: The time will be displayed on bottom left of the screen.
- Bottom Right: The time will be displayed on bottom right of the screen.

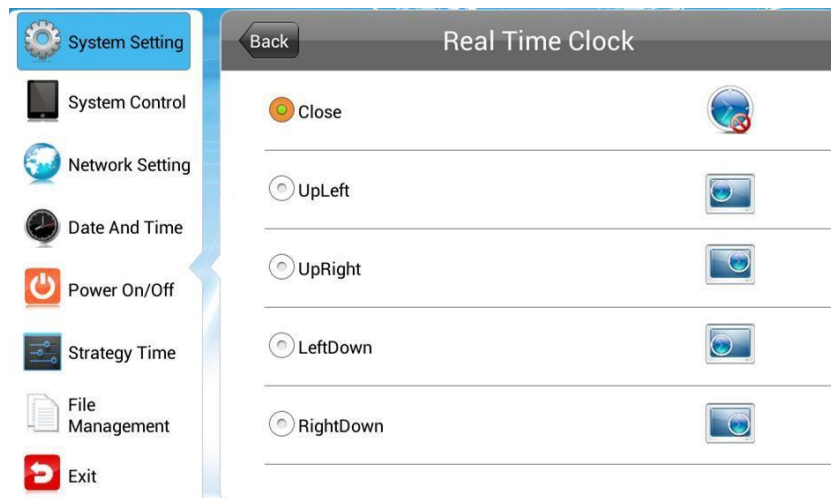


2.8 Play Log

 When the slider is turned on (blue), the screen will record all media files that are displayed.

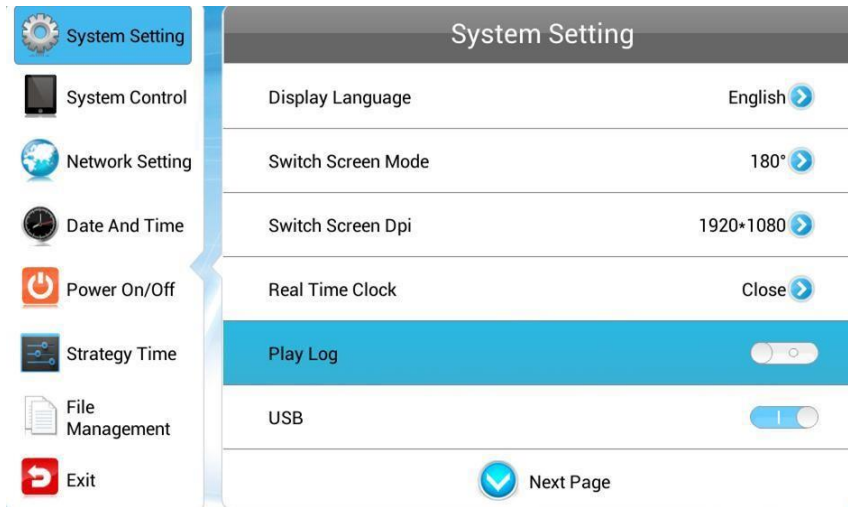


2.9 USB

 This allows you to enable or disable the USB port. If you want to be able to update the screen via plug and play, please ensure this is turned on (blue).

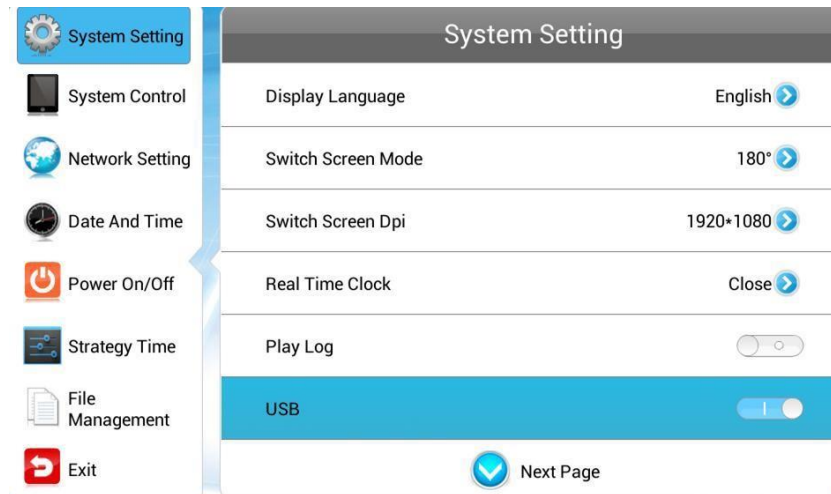

2.10 Sync Settings

 The synchronization feature allows multiple screens to display the same content at the same time.

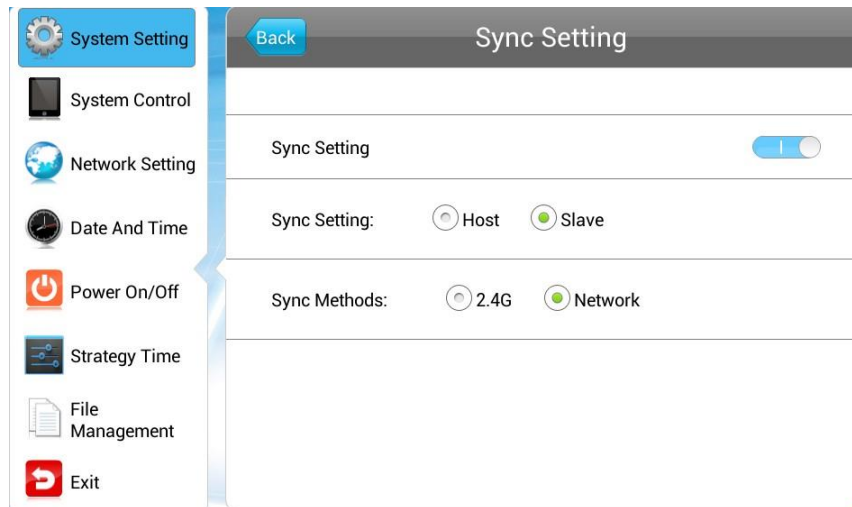

Sync Settings - enable or disable the feature of synchronization.

Sync Setting - set the role that the screen has during synchronization.

 
- *Host* - set the screen as the unique host in a network; the slave screens will synchronize from this host.
- *Slave* - as a slave, the screen will play synchronized content with the host.

Sync Methods - allows you to choose the player communication means for synchronization.

- *2.4G* - The host and slave screens will communicate via 2.4G by using a 2.4G module, which can achieve a short distance wireless communication of around 100 meters.
- *Network* - the host and slave screens in a LAN will communicate via the network.


2.11 Restore to Factory Settings

Highlight “Yes” and press “PLAY” to restore factory settings; this will restore all system settings back to default.

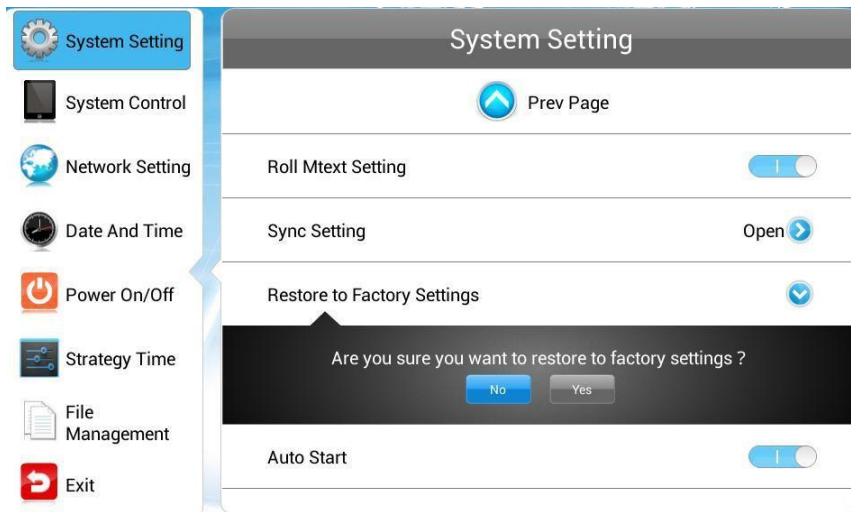


2.12 Auto Start

 This feature allows your screen to start playing the pre-loaded content as soon as it has finished booting up. If you want to enable this feature (recommended), please ensure this is turned on (blue).

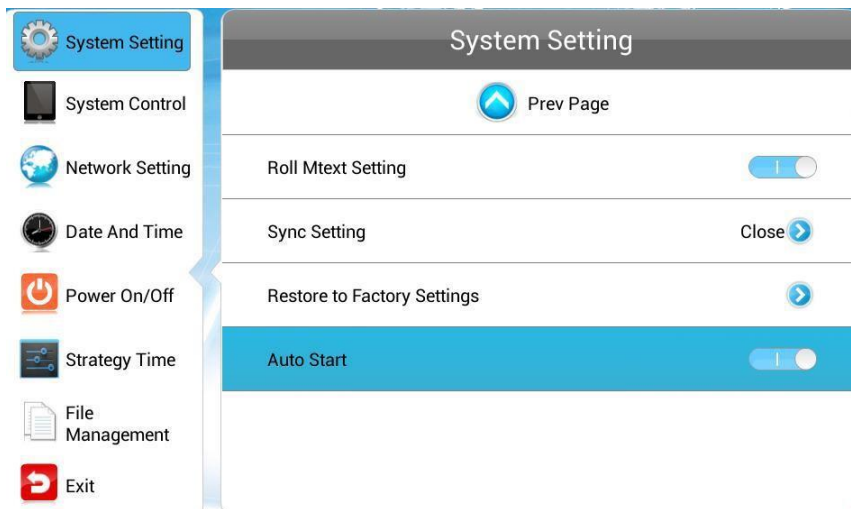


3. System Control

 The sub-menus within this section are: Work Mode, Content Management, Content Storage and Machine Name.

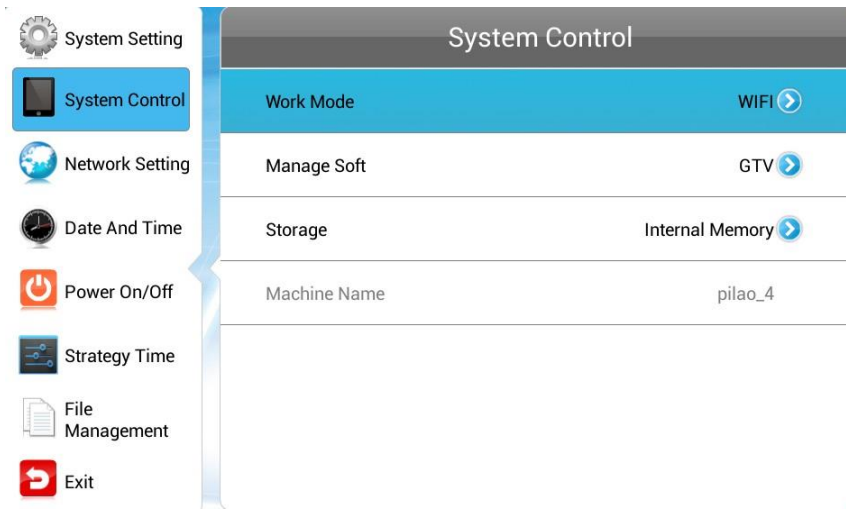


3.1 Work Mode

 This feature allows you set the update method for your screen. It should be set to “Wi-Fi”.

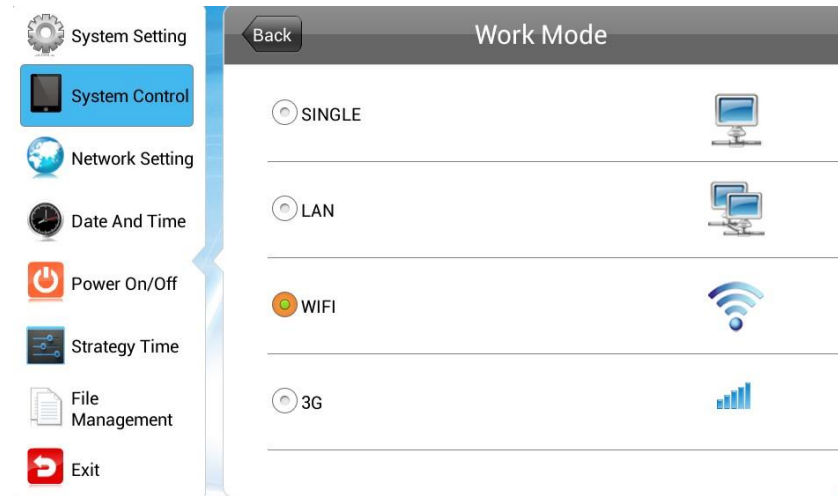

3.2 Content Storage

 
This should be set to “Internal Memory”.

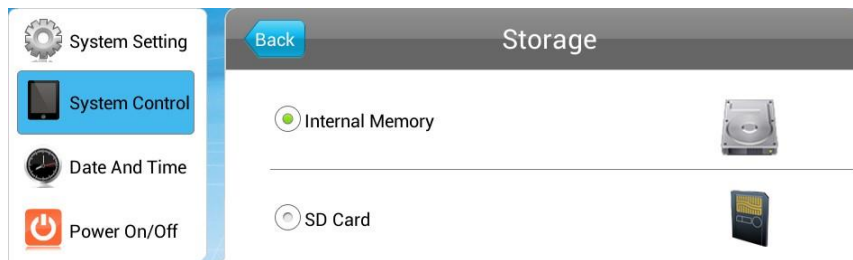

3.3 Machine Name


This feature will tell you what your screen's name is on the CMS.

 3.4 Network Setting

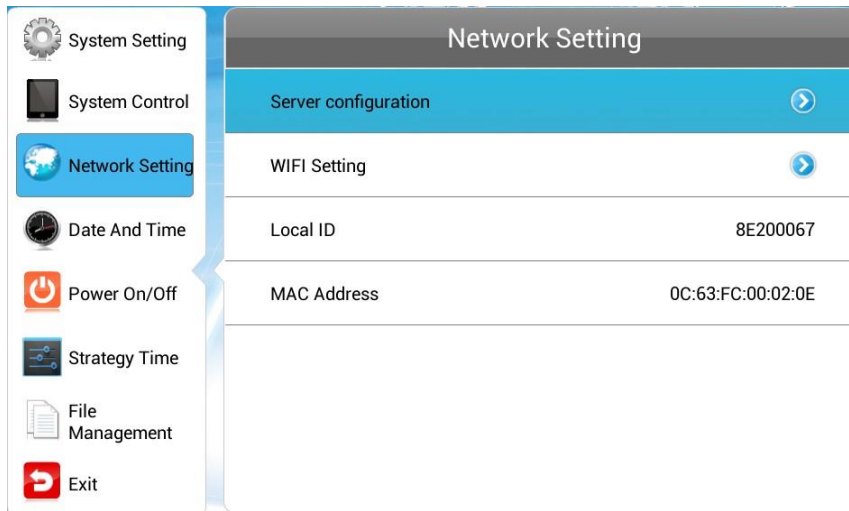

3.5 Server Configuration

 This section contains the information that allows the screen to communicate with the server. All settings within this section will be pre-set before you receive your goods. Please do not change any of these settings unless you have adequate technical support. The settings should be set as follows:

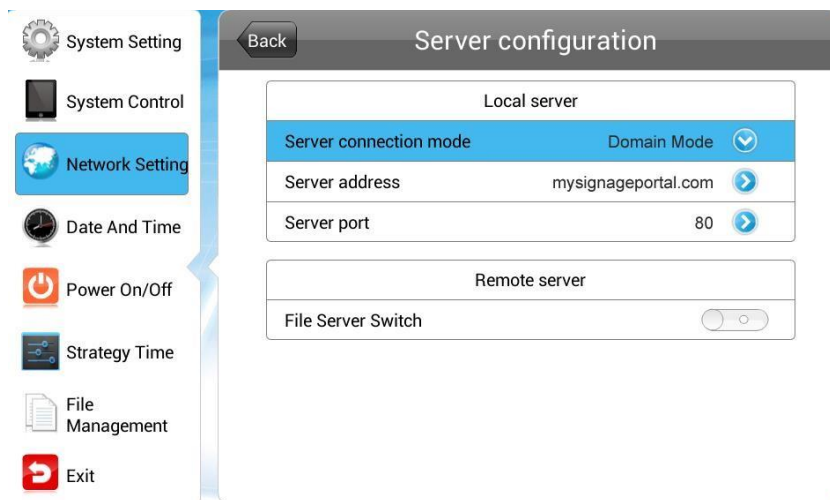

3.6 Proxy Server Setup

In most cases, this should be turned off. If your network has a proxy server, the slider should be turned on (blue). This will prompt three more options to appear:

2.5.1.1 Proxy server address

 
2.5.1.2 HTTP port

2.5.1.3 SOCKS port

All of these options must be given values. If the SOCKS port on your server is not open, please ensure that it is open and that the port number is inputted correctly to the screen.


3.7 IP Mode

This feature is only available when the screen is set to “LAN” mode. It allows you to set a static IP should this be necessary. In most cases, the “Addressing Method” should be set to DHCP.

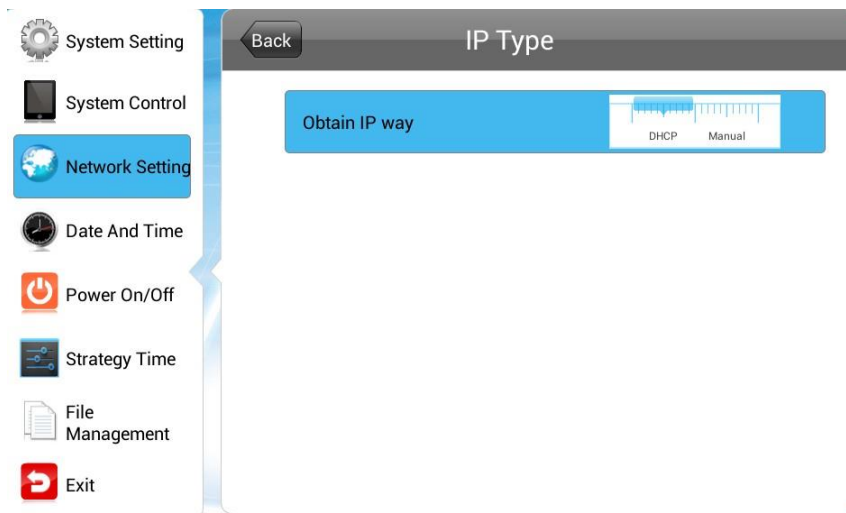


3.8 Wi-Fi Setting

 This feature is only available when the screen is set to “Wi-Fi” mode. It allows you to select your Wi-Fi network and input your password. This information will then be saved so that when the screen reboots, it automatically looks for your Wi-Fi network and has the credentials to connect.

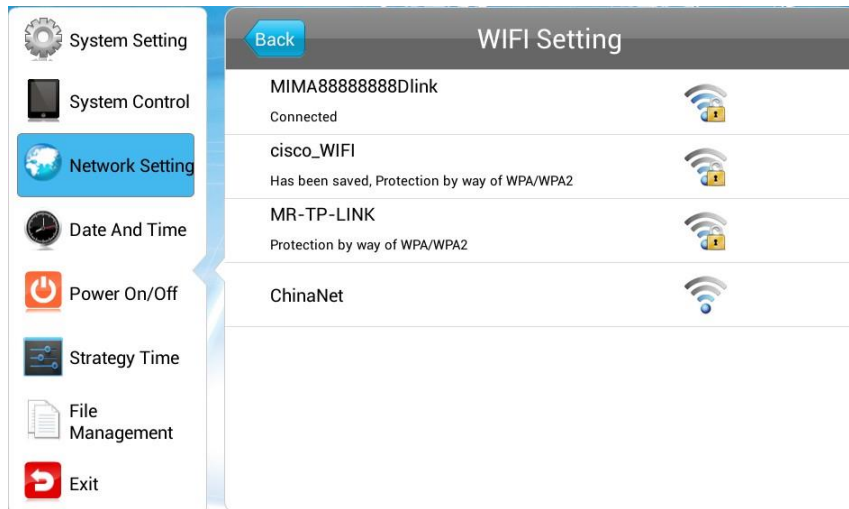

 Navigate to your Wi-Fi network from the list of available networks, then select the network. This will then prompt you to input your password (if required). Tap in the password field; this will bring up an on screen keyboard. Once you have entered your password, highlight and select “back” from the on screen keyboard. Then tap on “Connect”.

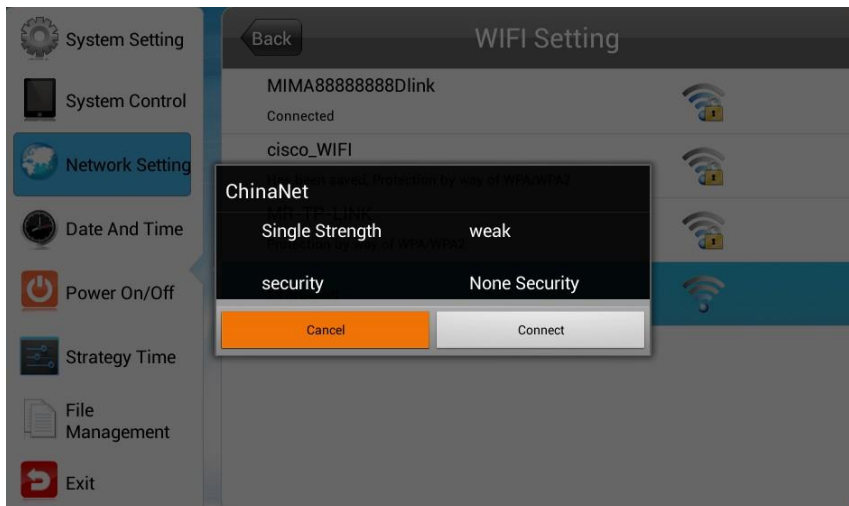

3.9 Local ID

 
This is your screen’s serial number. This is pre-set and cannot be changed.

3.10 MAC Address


This is your screen’s MAC Address. This is pre-set and cannot be changed.

3.11 Date & Time


As the screens are able to retrieve an accurate time from the server using Network Time Protocol, you shouldn't need to input manual values. The settings should be as follows:

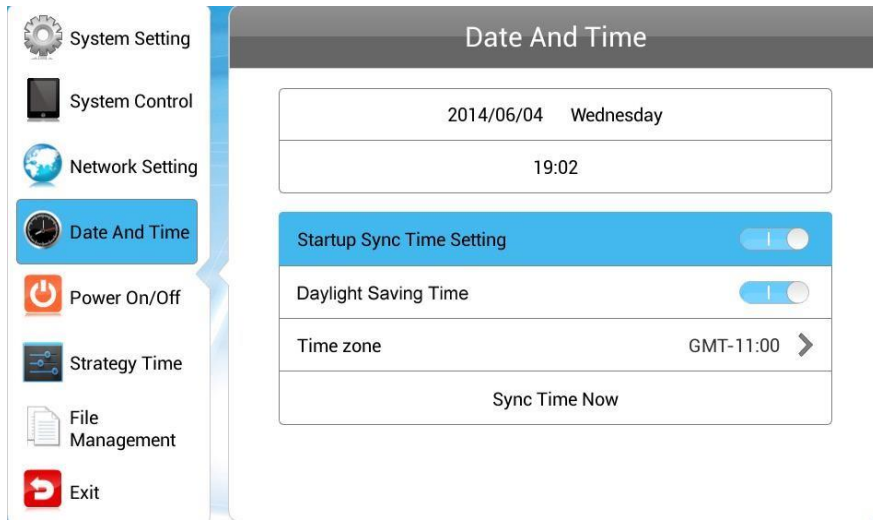

 To set manual values, first select the top "date". Another window will now appear, allowing you to set your date values. Once you have finished, navigate to and select "Save".

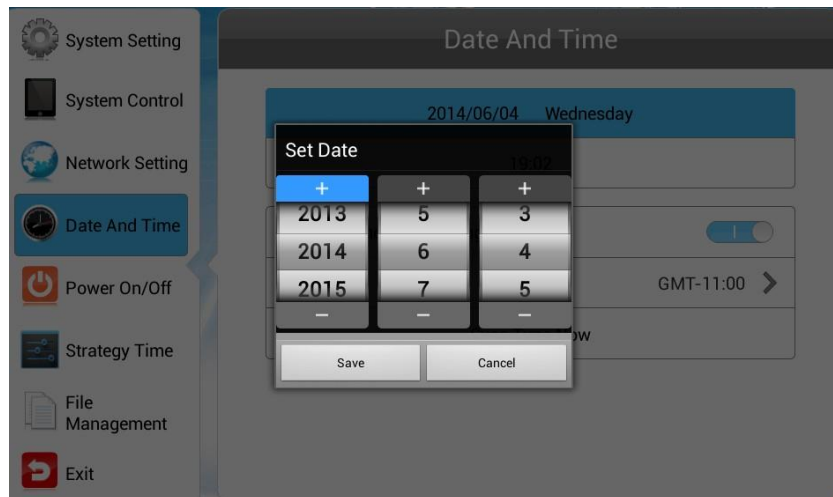


 Set the time using the same method, saving when complete.

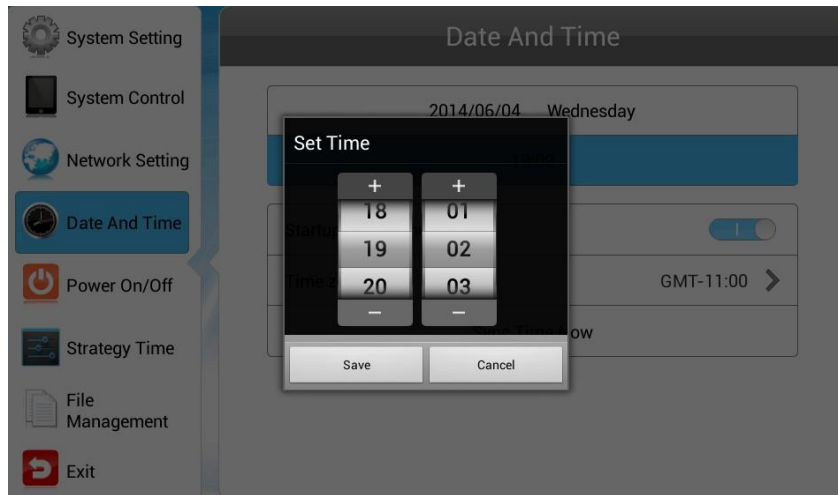


3.12 Power On/Off

 If you want your screen to power on and off automatically at designated times, you can use the CMS to set up an on/off timer. If you wish to manually set on/off times for your screen, please set the “Control Mode” to “Manual”.

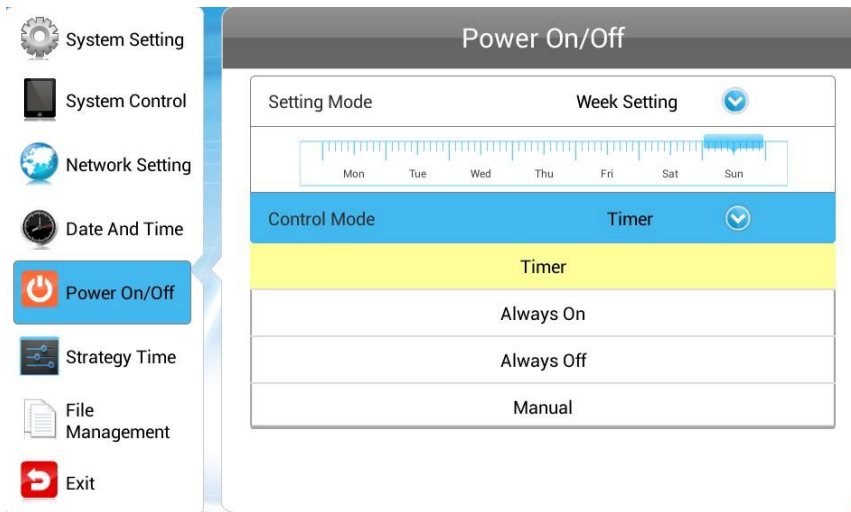


There are two “Setting Modes”: “Daily”, which allows you to set the same on/off times for every day of the week; or “Weekly”, which allows you to set individual on/off times for each day of the week.

 To activate the on/off timer, set the “Control Mode” to “Timer”. Next, set the “Setting Mode” to either “Daily” or “Weekly”.

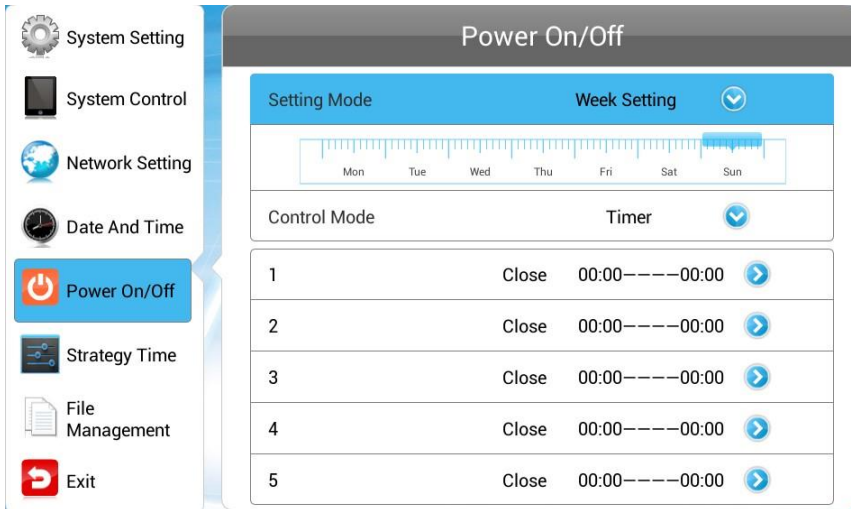


3.13 Timer Strategy

 This feature allows you to schedule your screen to play at different volumes at different times of the day and switch to different AV inputs at different times of the day. This can be achieved remotely using the CMS; however, if you wish to input these values manually you can do so.

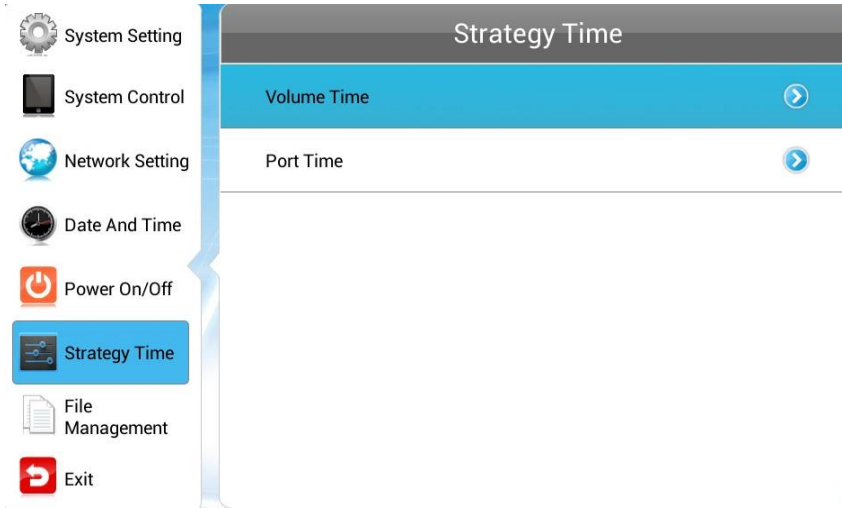


3.14 Volume Timer

 To enable this feature, turn the slider on (blue). New fields will now appear allowing you to set a default volume level, as well as timer fields for setting different volume levels for different periods of the day.

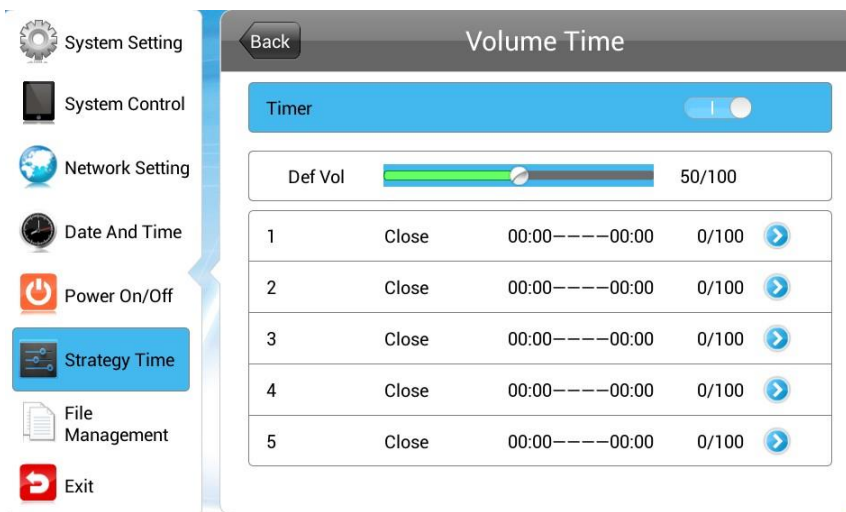


 Navigate to a timer field and tap this. Activate the timer, then set a volume level and a start/end time. Finally, navigate to and select “SAVE”.

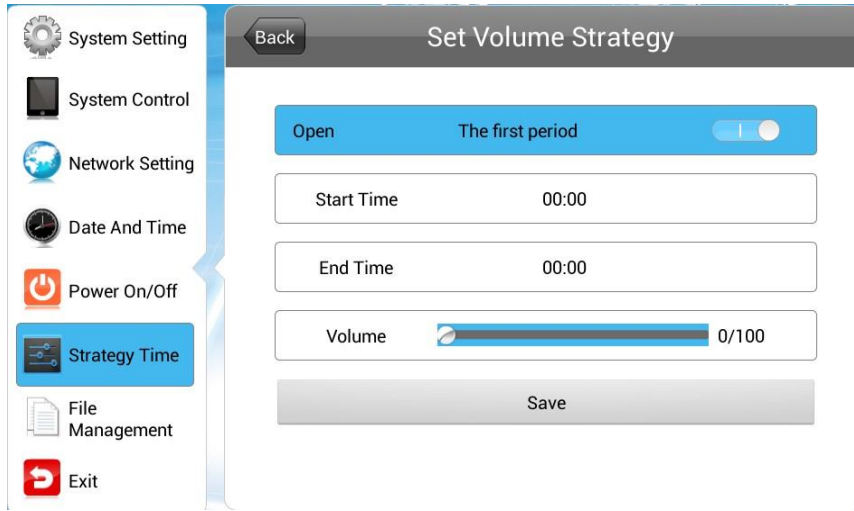


3.15 Port Timer

 To enable this feature, turn the slider on (blue). New fields will now appear allowing you to set different AV inputs for different periods of the day.

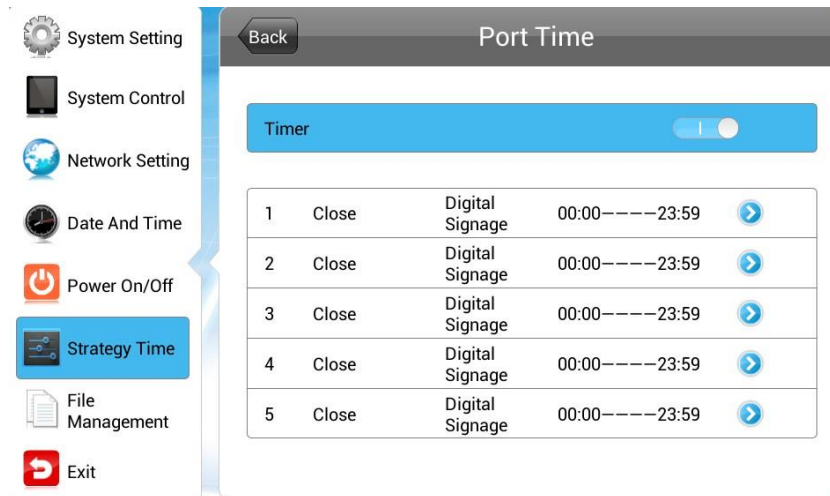


 Navigate to a timer field and tap this. Activate the timer, then set a start/end time and an AV input. Finally, navigate to and select "SAVE".

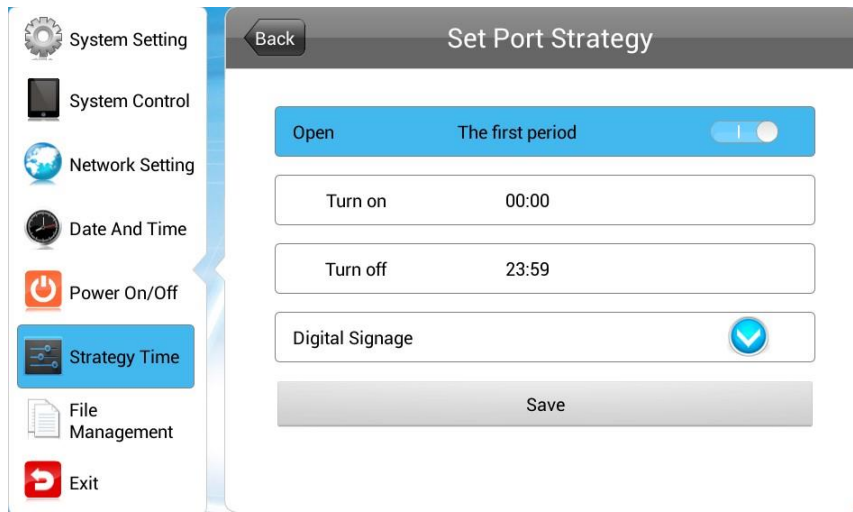

3.16 File Management

 Here you can check storage information, such as memory capacity, used space and free space. You can also format the disk. You should be extremely careful here as **formatting the disk will result in a total loss of data.**

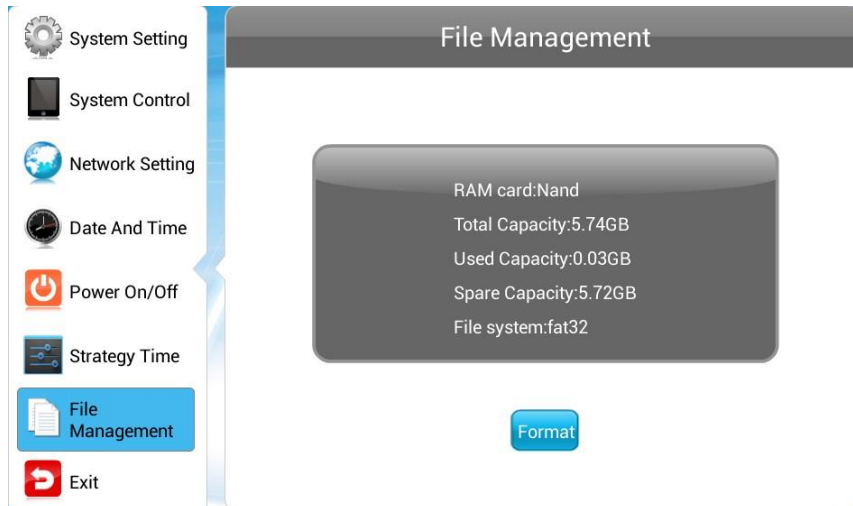

3.17 Exit

Highlighting and selecting this section will exit the Main Menu. If you have made any changes, the system will ask to if you want to reboot the screen so that the changes can take effect - select "YES".

4. Supported Media Files

Required:

Video	
Container	MP4, AVI, MPG
Codec	MPEG-1, MPEG-2, MPEG-4, XVID, H.264
Width	1920
Height	158
Audio	AAC or MP3

Recommended:

Format Profile	Main@4.0
Frame Rate	30fps
Standard	PAL
Bitrate	5000kbps
Bitrate Encoding	CBR
Field Order/Scan	Progressive
Audio	AAC or MP3

Required:

Image	
Container	JPEG
Compression	Baseline
Colour Mode	RGB
Width	1920 (1080 for portrait)
Height	1080 (1920 for portrait)
Maximum DPI	300

This unit does not support WMV or FLV video file types.



 
Please note: Video and image files should be a maximum of 1920x1588 resolution.

5. Copying Files from a USB Drive

If the Error! Reference source not found. is set to **USB** (default with Plug and Play purchased screens) you can copy files directly from a USB drive onto the screen to play the content on a loop. Make sure to reference the **Supported Media Files** table (Section 4.0) for the correct formats and resolution of the content.

Step 1

Copy the files you want to play on the screen on to the **USB Drive** in the root directory. Do not put the files into folders, they must be in the main root directory.

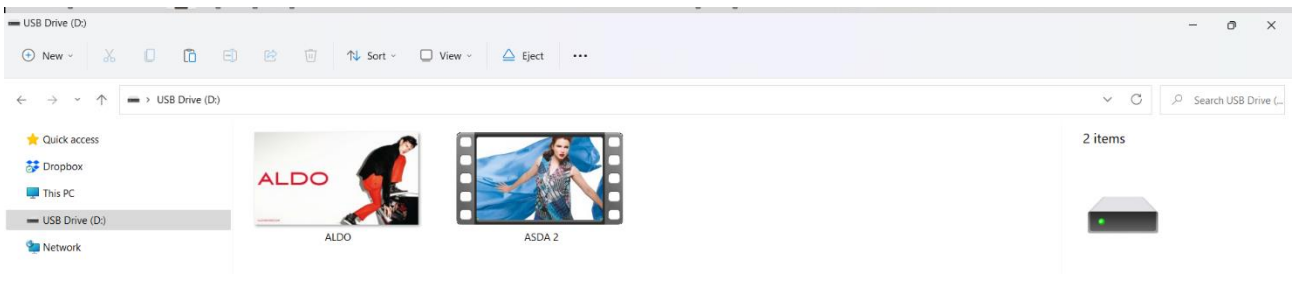


Please note: It is recommended to use a USB drive that is **less than 16GB** for the display screen to recognise the USB drive format (FAT32 format). This is usually the default format on USB drives less than 16GB.

Step 2

Insert the USB drive into a USB port (see Error! Reference source not found.).


Step 3

 The files on the USB drive will then be copied to the internal storage on the screen.

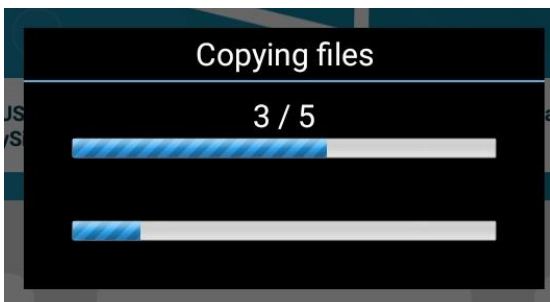

Step 4

 Remove the USB drive.

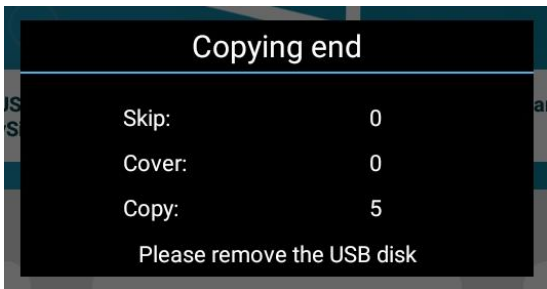

Step 5

The content on the USB drive will now play on the screen. If the content isn't playing or didn't copy over, please make sure to check the **Supported Media Files** table (Section 4.0).

6.F.A.Qs and Troubleshooting Guide

6.1 How should I maintain and clean my screen?

When you begin to observe the presence of dust, fingerprints, or smears on your screen, it is advisable to perform a cleaning.

- 1) Unplug or turn off your screen before you begin. Turning your screen off is safer, and you can see more dirt and smudges when the screen is unplugged. Plus, this gives your screen a chance to cool down, which will help you clean it better.



- 2) Clean the body or panel of your screen with a microfibre cloth dampened with a small amount of screen cleaning product. Please do so in a circular motion to clean off any dust or debris.
- 3) Once the screen is clean, remove any moisture using a dry cloth.



Please note: Do not spray water or any other liquid directly onto the screen. Any liquid entering the screen may cause a failure, fire, or electric shock; Never use paper towels, tissues, or rags to clean your screen. These contain fibres that can leave scratches on your screen. Also, remember to avoid pressing down too hard. Pushing on the screen too hard and cause pixels to burn out.

7. Other Information

7.1 Decreasing power consumption

When you turn off the screen, it enters Standby mode, which still consumes a small amount of power. To minimize power consumption, it is recommended to unplug the power cord when the screen will not be used for an extended period.

7.2 Disposal

Correct Disposal of This Product (Waste Electrical & Electronic Equipment) (Applicable in countries with separate collection systems) This marking on the product, accessories or literature indicates that the product and its electronic accessories should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources. Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal



7.3 Warnings

Image retention, commonly known as screen burn-in, can occur on most types of LCD panels if the same image is displayed continuously. The most common causes of image retention are logos that remain stationary on the LCD panel. To reduce this risk, avoid displaying still images for long durations and lower the brightness settings to decrease the intensity of the picture. Extended viewing of art in aspect ratios that are different from the aspect ratio of the panel may cause image retention. Always try to avoid black borders at the top or bottom by using correct image/video resolution. This will help eliminate the black borders and fit the picture to the entire area of the screen.