
# **OW55UHD10 Wall-Mount Installation Manual**



 Outdoor Wall-Mount Installation Method: This installation uses expansion screws for secure fixation.

Required Installation Parts	
1.Mounting Bracket × 1	5.M12 Eye Bolts × 2
2.Mounting Plates × 2	6.Keys × 2
3.M6 × 14 Machine Screws × 2	7.M10 $\times$ 120 Expansion Screws $\times$ 6
4.Quick Installation Manual × 1	

P.S. M6 x 14 indicates screw with diameter 6mm and depth of 14mm. M10 x 120 indicates screw with diameter 10mm and depth of 120mm.

## **Safety Precautions**


- · Refer to the actual items received for installation diagrams and parts.
- •The installation steps provided are for reference only.
- · Ensure all screws are securely tightened during installation.
- •The device must be installed within the specified weight and dimension limits.
- ·The installation surface must be flat and stable.
- · Ensure the installation is completely vertical. For wooden walls, the wall thickness must be at least 10 cm, with a load-bearing capacity of over 220 kg.
- · If the installation environment changes, consult the manufacturer's installation team for technical support.

# **Installation Steps**

# Step 1 Install the Wall-Mount Bracket Secure the wall-mount bracket to the wall using six M10 × 120 hexagonal inner expansion screws. Ensure it is mounted horizontally on a solid wall. M10 x 120 Hexagonal Inner Expansion Screws x 6 Solid Wall


## Step 2 Install the Eye Bolts

Remove the pre-installed hole plugs from the top of the display. Insert and secure two M12 eye bolts into the designated holes. The display is now ready for mounting.

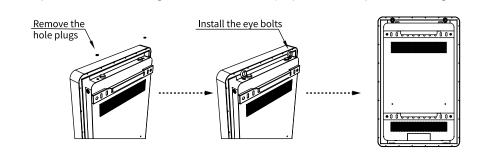


### Step 3 Mount the Display


Use the M12 eye bolts to lift the display, supporting both sides. Align and insert the top and bottom mounting plates into the wall-mount bracket.

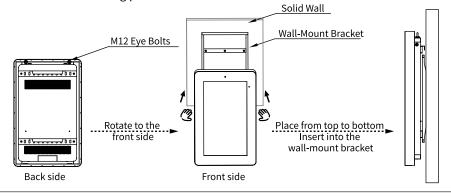

Make sure both the upper and lower wall-mounted panels are securely locked in place.

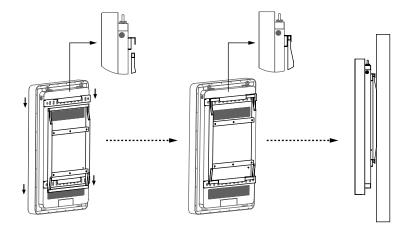


Once the mounting plates are fully inserted, remove the eye bolts and reinsert the hole plugs.

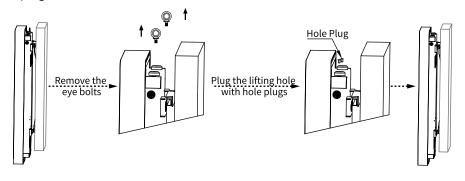


# Step 4 Install the Anti-Theft Screws

unlock.

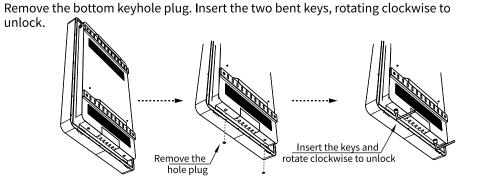

Open the front cover upwards and unscrew the M4 imes 12 hand-tightening screws on the module. Lift the module upwards.

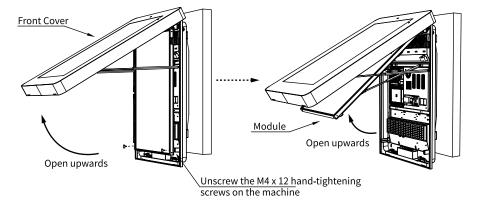

Align the rear cover hole with the anti-theft screw hole in the wall-mount bracket. Secure the display using two M6  $\times$  14 pan-head screws to lock it in place. Close the module and tighten the M4  $\times$  12 hand-tightening screws. Close the front cover to complete the installation.

